



Maxi Sound 32 Wave FX (Non PNP) [SC-8000 V3.2]

JP1 : CD/P= IDE CD Panasonic

JP2 : CD/IDE= IDE CD

JP3 : CD/S= CD Audio Sony

JP4 : CD/M= CD Audio Mitsumi

JP5 : CD/G/P= CD Audio Goldstar/Panasonic

JP6 : Wave Table Connector [Maxi Korg Wave, Wave Blaster...]

JP7 : Audio Connector Line In

JP8 : Audio Connector Volume

JP10 : Audio Connector Mic/Speakers

JP12 : Joystick/Midi Connector

JP11 : On Board Amplificator On/Off

JP9 : Effects DSP On/Off [Chorus/Reverb]

JP14 : Integrated Audio Synth On/Off

Banks Ram : Bank0 / Bank1 [1Mo with 3 Modulesx2=2Mo Max]