

1) WebSynthの音色

PCNo.	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument
0	0	Piano1	8	Wide Piano1	16	StudioPiano	126	Bright Piano	127	Ac.Piano1				
1	0	Piano2	8	Wide Piano2	126	Bright Piano	127	Ac.Piano2						
2	0	Piano3	1	Dig.Rhodes1	2	Dig.Rhodes2	8	Wide Piano3	126	Bright Piano	127	Ac.Piano1		
3	0	Honky-tonk	8	Honky-tonk2	126	Honky-tonk3	127	Elepiano1						
4	0	El.Piano1	8	Soft El.Piano	16	FM Piano1	24	Old Time El.P.	25	Hard Rhodes	26	Soft Rhodes	126	Grand Piano
5	0	El.Piano2	8	Detuned El P.	16	FM Piano2	24	FM Piano3	126	Bright Piano	127	Elepiano3		
6	0	Harpsichord1	8	Double Hps.	16	Wide Hps.	24	Harpsichord2	126	Bright Piano	127	Elepiano4		
7	0	Clavis	126	FM Elepiano	127	Honky-tonk3								
8	0	Celesta	126	Detuned FM	127	El.Organ1								
9	0	Glocken	126	FM Elepiano2	127	El.Organ2								
10	0	Music Box	126	Ac.Guitar	127	El.Organ3								
11	0	Vibraphone	1	Attack Vibe.	8	Wide Vibe.	126	Ac.Guitar	127	El.Organ4				
12	0	Marimba1	8	Marimba2	16	Barafon1	17	Barafon2	24	Log drum	126	Double Steel	127	Church Organ1
13	0	Xylophone	126	Funky Gt.	127	Church Organ2								
14	0	Tubular Bell	8	Church Bell	9	Carillon Bells	126	Mute Comp.Gt	127	Church Organ3				
15	0	Santur1	1	Santur2	8	Cymbalum	126	Chopper	127	Tango				
16	0	Drawer Org.1	1	Drawer Org.2	8	Detuned Org.1	9	Drawer Org.3	16	Timber Org.1	17	Timber Org.2	18	Timber Org.3
32	0	Drawer Org.4	33	Drawer Org.5	40	Organ Bass	126	Chopper	127	Harpsichord1				
17	0	Perc.Organ1	1	Perc.Organ2	8	Detuned Org.2	32	Perc.Organ3	126	Chopper	127	Harpsichord2		
18	0	Rotary Org.1	8	Rotary Org.2	16	Slow Rotary	24	Fast Rotary	126	Chopper	127	Harpsichord3		
19	0	Pipe Org.1	8	Pipe Org.2	16	Pipe Org.3	24	Organ Flute1	32	Organ Flute2	126	Chopper2	127	Clavinet1
20	0	Reed Organ	126	Chopper2	127	Clavinet2								
21	0	Accordion 1	8	Accordion 2	126	Chopper2	127	Clavinet3						
22	0	Harmonica1	1	Harmonica 2	126	Chopper2	127	Celestial1						
23	0	Bandoneon	126	Std.Bass	127	Celestial2								
24	0	Nylon Gt.1	8	Ukulele	16	Nylon Gt.2	24	A.Harmonics	32	Nylon Gt.3	40	Nylon Gt.4	126	Std.Bass
25	0	Steel Gt.1	8	12str.Gt.	9	Nylon&Steel	16	Mandolin	32	Steel Gt.2	126	Rock Bass	127	Elec.Brass2
26	0	Jazz Gt.1	1	Jazz Gt.2	8	Pedal Steel	126	Rock Bass	127	Elec.Brass3				
27	0	Clean Gt.	8	Chorus Gt.	126	Jazz Bass	127	Elec.Brass4						
28	0	Mute Gt.1	1	Mute Gt.2	8	Funky Gt.1	16	Funky Gt.2	126	Ac.Bass	127	Elec.Bass1		
29	0	Overdrive Gt.	126	Choir Voice	127	Elec.Bass2								
30	0	Dis.Guitar1	1	Dis.Guitar2	2	Grown Guitar	8	Feedback Gt.1	9	Feedback Gt.2	16	Powerful Gt.1	17	Powerful Gt.2
24	0	Riff Gt.1	25	Riff Gt.2	126	Choir Voice	127	Elec.Bass3						
31	0	Gt.Harmonics	8	Gt.Feedback	16	Ac.Harmonics	126	Choir Voice	127	Elec.Bass4				
32	0	Wood.Bass	126	Choir Voice	127	Fantasy								
33	0	Fingerd Bs.1	1	Fingerd Bs.2	2	Jazz Bass	126	Legart Str.	127	HarmoRing				
34	0	Pick Bass1	8	Pick Bass2	126	Attack Str.	127	Holy Vox						
35	0	Fretless Bs.1	1	Fretless Bs.2	2	Fretless Bs.3	3	Fretless Bs.4	4	Syn.Fretless1	5	Syn.Fretless2	126	Pad Str.
36	0	Slap Bass1	8	Slap Bass2	126	Pad Str.	127	Daylight						
37	0	Slap Bass3	126	Classic Org.	127	Gentle Air								
38	0	Syn.Bass1	1	Dance Bass1	8	Analog Bass1	9	Analog Bass2	10	Techno Bass1	16	Synth.Bass3	126	Classic Org.
39	0	Syn.Bass2	1	Dance Bass2	2	Mod.Bass	3	Active Bass	8	Powerful Bass	9	Hammer Bass	16	Wow Bass
18	0	Analog Bass4	19	Detune Bass	126	Classic Org.	127	Funny Voice						
40	0	Violin	8	Melow Violin	126	70 " organ	127	Pure Bell						
41	0	Viola	126	Classic Org.	127	Frozen Rain								
42	0	Cello	126	Classic Org.	127	Newage Oboe								
43	0	Contrabass	126	70 ' organ	127	Syn.Blow								
44	0	Tremolo Str.1	8	Tremolo Str.2	9	Dramatic Str.	126	70 ' organ	127	Syn.Lead1				
45	0	Pizzicato	126	70 " organ	127	Syn.Lead2								
46	0	Harp	126	Trumpet3	127	BelII Chime								
47	0	Timpani	126	Trumpet3	127	Pure Square								
48	0	Strings1	1	Strings2	8	Orchestra1	9	Orchestra2	10	Orchestra3	11	ChoirStrings	16	Vel. Strings
127	0	String Ems.1												
49	0	Slow Strings1	1	Slow Strings2	8	Str Legato	9	Silk Strings	10	Slow Strings3	127	String Ems.2		
50	0	Syn.Strings1	1	Fat Strings	8	Syn.Strings3	127	String Ems.3						
51	0	Syn.Strings2	126	Trombone3	127	Snap Str.								
52	0	Chorale1	8	Chorale2	9	Chorale Pad	32	Chorale3	126	Trombone3	127	Solo Str.1		
53	0	Tuh Voice	126	Trombone3	127	Solo Str.2								
54	0	Synth.Choir1	8	Synth.Choir2	126	Solo Sax	127	Solo Str-Lo1						
55	0	Orchestra Hit	8	Hyper Hit	9	Acid Hit	10	Powerful Hit	16	Freaky Hit	126	Solo Sax2	127	Solo Str-Lo2
56	0	Trumpet1	1	Trumpet2	8	Flugel Horn	24	Bright Tp.	25	Warm Tp.	126	Solo Sax3	127	W.Contrabass
57	0	Trombone1	1	Trombone2	126	Solo Sax	127	Harpist1						
58	0	Tuba1	1	Tuba2	126	Brass Sect.	127	Harpist2						
59	0	Muted Tp.	126	Brass Sect.	127	Ac.Guitar								
60	0	French Horn1	1	French Horn2	8	French Horn3	16	Ens.Horn	126	Brass Sect.	126	Ac.Guitar		
61	0	Brass1	8	Brass2	16	Brass Fall	126	Brass Sect.	127	El.Guitar				
62	0	Syn.Brass1	1	Syn.Brass3	8	Syn.Brass4	9	Syn.Brass5	126	Syn.Brass6	126	Brass Sect.	127	El.Guitar
63	0	Syn.Brass2	1	Syn.Brass7	8	Syn.Brass8	16	Attack Brs.1	17	Attack Brs.2	126	The Hit	127	Ethnic Str.

PCNo.	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument	CC0	Instrument
64	0	Soprano Sax	126	Soft Sax	127	Ac.Bass1										
65	0	Alto Sax	8	Alto Sax2	126	Band Piano1	127	Ac.Bass2								
66	0	Tenor Sax	8	Real Tenor	126	Band Piano2	127	El.Bass								
67	0	Baritone Sax	126	Honky-tonk	127	El.Bass										
68	0	Oboe	126	Band E.Piano1	127	Chopper1										
69	0	English Horn	126	Band E.Piano2	127	Chopper2										
70	0	Bassoon	126	Band Harpsi.	127	Smooth Bass1										
71	0	Clarinet1	8	Bs.Clarinet	126	Band Clavi	127	Smooth Bass2								
72	0	Piccolo	126	Band Organ1	127	Fue1										
73	0	Flute	126	Band Organ2	127	Fue2										
74	0	Recorder	126	Band Church	127	Piccolo										
75	0	Pan Flute	8	Pan Flute2	126	Band Organ4	127	Piccolo								
76	0	Blow Bottle	126	Band Accordion	127	Tatebue										
77	0	Shakuhachi	126	Band Harmonica	127	Pan Pipes										
78	0	Whistle	126	Band Bandneon	127	Sax1										
79	0	Ocalina	126	Band Gut.Gt.	127	Sax2										
80	0	Square	1	Raw Square	2	Syn. Lead1	3	FM Lead1	4	FM Lead2	5	Sweep Lead	6	Lite Square	8	Sine Wave
126	Band Jazz Gt.	127	Sax3													
81	0	Saw	1	Raw Saw	2	Pulse Saw	3	Digi Saws	4	Powerful Lead	5	Attack Lead	6	Syn. Lead2	7	Dry Saw
8	Establish Solo	16	Bee Saws	126	Band Clean Gt.											
82	0	Syn.Pipe	1	Syn.Lead1	2	Syn.Lead2	126	Band Steel Gt.	127	Clatinet1						
83	0	Chipper Lead	126	Band Mute Gt.	127	Clatinet2										
84	0	Syn.Guitar2	8	Syn.Guitar3	126	Band Crunch	127	W.Oboe								
85	0	Chorus Vox	126	Band Dist.	127	W.Oboe2										
86	0	Saw 5th	1	Powerful 5th	126	Band Harmonics	127	Bassoon								
87	0	BassLead	1	Deep Lead	2	Fat Lead	126	Band Fin.Bass	127	Blues Harp						
88	0	Fantasy 1	1	Fantasy 2	126	Band Ac.Bass	127	Trumpet1								
89	0	Warm Pad	1	Mellow Pad	2	Horn Pad	3	Organ Pad	4	Mild Pad	126	Band Pick Bass	127	Trumpet2		
90	0	Poly synth1	1	Poly synth2	126	Band Fretless	127	Trombone1								
91	0	Cosmo Voice	1	Heavenly	126	Band Slap 1	127	Trombone2								
92	0	Glass Pad	126	Band Slap2	127	French Horn1										
93	0	Metallic Pad	1	Tine Pad	2	Ring Pad	126	Band SynBs1	127	French Horn2						
94	0	Holy Pad	126	Band SynBs2	127	W.Tuba										
95	0	Sweep Pad	1	Polarity	8	Concentrate	9	Sweep Pad2	10	Celeste Pad	126	TheViolin	127	Brass Ems1		
96	0	Iceland	1	Iceland2	2	African	8	Clavi Pad	126	TheViola	127	Brass Ems2				
97	0	Curtain Rise	1	Generation	2	Bignining	8	Freakish	126	The Cello	127	Vibraphone1				
98	0	Crystal 1	1	Syn Mallet	2	Crystal 2	3	Syn.Glocken 1	4	Syn.Glocken 2	5	Syn.Glocken 3	6	Pure Bells1	7	Pure Bells2
8	Vib. Bells	9	Digital Bells	16	Voice Bells	17	Air Bells	18	Harp Bells	19	Gamelan Bells	126	The Contrabass	127	Vibraphone2	
99	0	Atmos1	1	Atmos2	2	Nylon Harp1	3	ChoralHarp	4	Hoh Release	5	Nylon&Rhodes	6	Ambience	126	The Tremolo
127	Mallet															
100	0	Shining	126	The Pizzcato	127	Wind Bell										
101	0	Fairy1	1	Fairy2	2	The Cosmos	126	The Harp	127	Kanenone						
102	0	Echos	1	EchosBell	2	Ring Echo	3	Ring Echo2	4	Ring Echo3	5	Reso Echo	6	Tears Piano	126	The Timpani
127	Tube Bell															
103	0	Stars	1	Stars2	126	The Strings	127	Xylophone								
104	0	Sitar1	1	Sitar2	2	Detune Sitar	8	Tambra	16	Tambra2	126	The Slow Str.	127	Mokkin		
105	0	Banjo1	1	Mute Banjo	8	Rabab	16	Gopich.	24	Oud	126	The SynStr.1	127	Koto Str.		
106	0	Shamisen	1	Jyongara	126	The SynStr.2	127	Sho								
107	0	Koto	8	Taisho Koto	16	Qunun	126	The Voice1	127	Jpn.Flute						
108	0	Kalimba	126	The Voice2	127	Whistle1										
109	0	Bagpipe	126	The Voice3	127	Whistle2										
110	0	Fiddle	126	Band Sax1	127	Blow										
111	0	Shanai	1	Shanai2	8	Pung	16	Hichiriki	126	Band Sax2	127	Breath Pipe				
112	0	Tinkle Bell	8	Bonang	9	Gender	10	Gamelan	11	Dt.Gamelan	16	Tibet Cymbal	126	Band Sax3	127	W.Timpani
113	0	Agogo	8	Atarigane	126	Band Sax4	127	TomTom								
114	0	Steel Drums	126	The Oboe	127	El.Snare										
115	0	Woodblock	8	Castanets	126	The Engl. Hrn.	127	El.Drum1								
116	0	Taiko	8	Orch Drum	126	The Fagot	127	El.Drum2								
117	0	MelodyTom1	1	Real.Tom	8	MelodyTom2	9	Rock Tom	126	The Clarinet	127	Matsuridaiko				
118	0	Syn.Tom	8	Analog Tom	9	El.Percussion	126	The Piccolo	127	Taiko Rim						
119	0	Rev.Cymbal 1	1	Rev.Cymbal 2	8	Rev.Snare 1	9	Rev.Snare 2	16	Rev.Kick 1	17	Rev.Kick 2	24	Rev.Tom 1	25	Rev.Tom 2
126	The Flute	127	The Cymbal													
120	0	Gt.Fret	1	Gt.Cut	2	Slap String	3	Gt.Cut2	4	Dist.Cut	5	Bass Slide	6	Scrape	126	The Recorder
127	Castanets															
121	0	Breathing	1	Key Click	126	The Pan Flute	127	Triangle								
122	0	Seaside	1	Rainfall	2	Thunder	3	Wind Blows	4	River Side	5	Bubble	126	The Bottle	127	The Hit
123	0	Bird Sing1	1	Dog	2	Horse	3	Bird Sing2	4	Baby Cat	5	Growler	126	The Shakuhachi	127	Telephoning
124	0	Telephone1	1	Telephone2	2	Door Creak	3	Door Shut	4	Scratch 1	5	Wind Chimes	7	Scratch 2	126	The Whistle
127	Sparrow															
125	0	Helicopter	1	Car Start	2	Car Stop	3	Car Pass	4	Car Crush	5	Siren	6	Train	7	Jet
8	Appolo	9	Breakdown	126	The Ocarina	127	Jam Wave									
126	0	Applause	1	Laughter	2	Screaming	3	PunchSound	4	Heart Beat	5	Foot Step	6	Audience	126	The Organ
127	Sing Bell															
127	0	Gun Shot	1	Machine Gun	2	Laser Gun	3	Explosion	126	The FretNoize	127	Jungle Sound				

<注> PC=プログラムチェンジャンパー

CC0=コントロールチェンジャンパー0(バンクセレクト0)の値

Instrument=音色名

2) WebSynth / ドラムキットの音色 (Note No.5 ~ 59)

Note No.	Standard Set (PC-1)	Standard Set (PC-2)	Room Set (PC-9)	Power Set (PC-17)	Electro Set (PC-25)	Club Set (PC-26)	Dance Set (PC-27)	Jazz Set (PC-33)
5	Standard1 Kick1							
6	Standard1 Kick2							
7	Standard2 Kick1							
8	Standard2 Kick2							
9	Kick1							
10	Kick2							
11	Soft Kick							
12	Jazz Kick1							
13	Jazz Kick2							
14	Concert Bass Drum							
15	Room Kick1							
16	Power Kick3							
17	Room Kick3							
18	Power Kick2							
19	Electric Kick3							
20	Electric Kick1							
21	Electric Kick							
22	Club Bass Drum2							
23	Club Bass Drum1							
24	Dance Kick							
25	Snare Roll							
26	Finger Snap							
27	HQ							
28	Slap							
29	Scratch Up				Scratch Up2	Scratch Up2	Scratch Up2	
30	Scratch Down				Scratch Down2	Scratch Down2	Scratch Down2	
31	Sticks							
32	Suquare Click							
33	Metronome Click							
34	Metronome Bell							
35	Standard Kick2	Standard2 Kick2	Room Kick2	Room Kick2	Electric Kick2	Club Bass Drum2	Dance Kick	Jazz Kick2
(C2) 36	Standard Kick1	Standard2 Kick1	Room Kick1	Room Kick1	Electric Kick1	Club Bass Drum1	Electric Kick2	Jazz Kick1
37	Side Stick					Club Rim Shot		
38	Standard1 Snare1	Standard2 Snare1	Room Snare1	Power Snare1	Electric Snare1	Club Snare1	Dance Snare1	Jazz Snare1
39	Hand Clap							
40	Standard1 Snare2	Standard2 Snare2	Room Snare2	Power Snare2	Electric Snare2	Club Snare3	Dance Snare2	Jazz Snare2
41	Low Tom2		Room Low Tom2	Room Low Tom2	Electric Low Tom2	Club Low Tom2	Electric Low Tom2	
42	Close Hi-hat1					Club Close H.H	Dance Close H.H	
43	Low Tom1		Room Low Tom1	Room Low Tom1	Electric Low Tom1	Club Low Tom1	Electric Low Tom1	
44	Pedal Hi-hat					Club Close H.H	Dance Close H.H	
45	Middle Tom2		Room Middle Tom2	Room Middle Tom2	Electric Middle Tom2	Club Middle Tom2	Electric Middle Tom2	
46	Open Hi-hat1					Club Open H.H	Dance Open H.H	
47	Middle Tom1		Room Middle Tom1	Room Middle Tom1	Electric Middle Tom1	Club Middle Tom1	Electric Middle Tom1	
(C3) 48	High Tom2		Room High Tom2	Room High Tom2	Electric High Tom2	Club High Tom2	Electric High Tom2	
49	Crash Cymbal1					Club Cymbal		
50	High Tom1		Room High Tom1	Room High Tom1	Electric High Tom1	Club High Tom1		
51	Ride Cymbal1							
52	Chinese Cymbal				Reverse Cymbal		Reverse Cymbal	
53	Ride Bell							
54	Tambourine							
55	Splash Cymbal							
56	Cow Bell					Club Cow Bell		
57	Crash Cymbal2							
58	Vibra-Slap							
59	Ride Cymbal2							

< 注 > PC=プログラムチェンジナンバー (ドラムキットナンバー)
= Standard Setと同じ楽器音がアサインされています。
.....=楽器音はアサインされていません。

Note No.	Brush Set(PC-41)	Orchestra Set(PC-49)	Ethnic Set(PC-50)	Kick+Snare Set(PC-51)	SFX Set (PC-57)	Rhythm FX Set(PC-58)	Standard Set3(PC-128)
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25			Finger Snap
26			Tambourine
27		Closed Hi-hat	Castanets2
28		Pedal Hi-hat	Crash Cymbal1
29		Open Hi-hat	Snare Roll
30		Ride Cymbal1	Orch Snare Drum
31			Orch Cymbal	Scratch Up2
32			Orch Bass Drum1	Scratch Down2
33			Jingle Bell	Cutting Noise 2 Up
34			Bell Tree	Cutting Noise 2 Down
35	Jazz Kick2	Jazz Kick1	Bar Chimes	Dis.Cutting Noise 2 Up	Kick Drum
(C2) 36	Jazz Kick1	Orch Bass Drum	Wadaiko	Dis.Cutting Noise 2 Down	Rev. Kick1	Kick Drum
37			Wadaiko Rim Shot	Bass Slide	Rev. Concert Bass Drum1	Rim Shot
38	Brush Tap1	Orch Snare Drum	Shimedaiko	Scrape	Rev. Power Kick1	Snare Drum
39	Brush Slap1	Castanets	Atarigane	HQ	Rev. Electric Kick1	Hand Clap
40	Brush Swirl1	Orch Snare Drum	Hyoushigi	Standard1 Kick1	Slap	Rev. Snare1	El.Snare Drum
41		Timpani F	Ohkawa	Standard1 Kick2	Scratch Up	Rev. Snare2	Standard Low Tom
42		Timpani F#	High Kotsuzumi	Standard2 Kick1	Scratch Down	Rev. StandardSet1 Snare1	Closed Hi-hat
43		Timpani G	Low Kotsuzumi	Standard2 Kick2	Sticks	Rev. Tight Snare	Standard Low Tom
44		Timpani G#	Ban	Kick1	Square Click	Rev. Dance Snare	Open Hi-hat
45		Timpani A	Large Gong	Kick2	Metronome Click	Rev. Club Snare	Standard Middle Tom
46		Timpani A#	Small Gong	Soft Kick	Metronome Bell	Rev. Tom1	Open Hi-hat
47		Timpani B	Bend Gong	Jazz Kick1	Guitar Fret Noise	Rev. Tom2	Standard Middle Tom
(C3) 48		Timpani C	Thai Gong	Jazz Kick2	Guitar Cu Up	Rev. Sticks	Standard High Tom
49		Timpani C#	Tibet Cymbal	Concert Bass Drum	Guitar Cut Down	Rev. Slap	Crash Cymbal
50		Timpani D	Gamelan Gong	Room Kick1	String Slap	Rev. Cymbal1	Standard High Tom
51		Timpani D#	Udo Short	Room Kick2	FletKey Click	Rev. Cymbal2	Ride Cymbal
52		Timpani E	Udo Long	Power Kick1	Laugter	Rev. Open Hi-hat
53		Timpani F	Udo Slap	Power Kick2	Screaming	Rev. Ride Cymbal
54		Bendir	Electric Kick2	Punch Sound	Punch Sound	Rev. Dane Close H.H	Tambourine
55			req dum	Electric Kick1	Heart Beat	Rev. Closed Hi-hat
56			req tik	Electric Kick	Foot Step1	Rev. Gong	Cow Bell
57		Orch Cymbal2	Table te	Club Bass Drum1	Foot Step2	Rev. Bell Tree
58			Table na	Club Bass Drum2	Applause	Rev. Guiro
59		Orch Cymbal1	Table tun	Dance Kick	Door Creak	Rev. Bendir

2) WebSynth / ドラムキットの音色 (Note No.60 ~ 119)

	Standard Set1 (PC-1)	Standard Set2 (PC-2)	Room Set (PC-9)	Power Set (PC-17)	Electro Set (PC-25)	Club Set (PC-26)	Dance Set (PC-27)	Jazz Set (PC-33)
(C4) 60	High Bongo							
61	Low Bongo							
62	Mute High Conga					Club High Conga		
63	Open High Conga					Club Middle Conga		
64	Low Conga					Club Low Conga		
65	High Timbale							
66	Low Tomble							
67	High Agogo							
68	Low Agogo							
69	Cabasa							
70	Maracas					Club Maracas		
71	short Whistle							
(C5) 72	Long Whistle							
73	Short Guiro							
74	Long Guiro							
75	Claves					Club Claves		
76	High Woodblock							
77	Low Woodblock							
78	Mute Cuica						High Hoo	
79	Open Cuica						Low Hoo	
80	Mute Triangle						El.MuteTriangle	
81	Open Triangle						El.OpenTriangle	
82	Shaker							
83	Jingle Bell							
(C6) 84	Bell Tree	Bar Chimes						Bar Chimes
85	Castanets							
86	Mute Surdo							
87	Open Surdo							
88	Standard1 Snare1							
89	Standard1 Snare2							
90	Standard2 Snare1							
91	Standard2 Snare2							
92	Tight Snare							
93	Concert Snare							
94	Jazz Snare1							
95	Jazz Snare2							
(C7) 96	Room Snare1							
97	Room Snare2							
98	Room Snare3							
99	Power Snare2							
100	Gated Snare							
101	Dance Snare1							
102	Dance Snare2							
103	Disco Snare							
104	Electric Snare4							
105	House Snare							
106	Electric Snare1							
107	Electric Snare3							
108	Club Snare1							
109	Club Snare2							
110	Club Snare3							
111	Club Snare4							
112	BrushTap3							
113	Brush Tap2							
114	Brush Slap1							
115	Brush Slap2							
116	Brush Slap3							
117	Brush Swirl1							
118	Brush Swirl2							
119	Brush Swirl3							

< 注 > PC=プログラムチェンジャンパー (ドラムキットナンバー)
= Standard Setと同じ楽器音がアサインされています。
.....=楽器音はアサインされていません。

	Brush Set(PC-41)	Orchestra Set(PC-49)	Ethnic Set(PC-50)	Kick+Snare Set(PC-51)	SFX Set (PC-57)	Rhythm FX Set(PC-58)	Standard Set3(PC-128)
(C4) 60			Table ge	Standard1 Snare1	Door Shut	Rev. Gun Shot	High Bongo
61			Table ge Hi	Standard1 Snare2	Scratch	Rev. Scratch	Low Bongo
62			Talky Drum	Standard2 Snare1	Wind Chimes	Rev. Lasergan	Mute High Conga
63			Bend Talky Drum	Standard2 Snare3	Car Start	Key Click	High Conga
64			caxixix	Tight Snare	Car Stop	Techno Thip	Low Conga
65			Djembe	Concert Snare	Car Pass	Pop Drop	High Timbale
66			Djembe Rim Shot	Jazz Snare1	Car Crush	Woody Slap	Low Timbale
67			Timbales Low	Jazz Snare2	Siren	Distortion Kick	High Agogo
68			Timbales Middle	Room Snare3	Train	Syn.Drop	Low Agogo
69			Timbales High	Room Snare2	Jet	Rev. HQ	Cabasa
70			Cow Bell	Power Snare1	Helicopter	Pipe	Maracas
71			High Bongo	Power Snare2	Appolo	Freeze Block	Short Whistle
(C5) 72			Low Bongo	Gated Snare	Gun Shot	Dig.Tambourine	Long Whistle
73			Mute High Conga	Dance Snare1	Machine Gun	Alias	Vibrate Slap
74			Open High Conga	Dance Snare2	Laser Gun	Mod. Bell
75			Mute Low Conga	Disco Snare	Explosion	Spark	Claves
76			Conga Slap	Electric Snare4	Dog	Metalic Percussion	Laughter
77			Open low Conga	House Snare	Horse Steps	Vel. Noise FX	Screaming
78			Conga Slide	Electric Snare1	Birds Sing1	Noise Clap	Punch Sound
79			Mute Pandiero	Electric Snare3	Rainfall	Swish	Heart Beat
80			Open Pandiero	Analog Snare	Thunder	Slappy	Foot Step1
81			Open Surdo	Club Snare2	Wind Blow	Oh Voice	Foot Step2
82			Mute Surdo	Club Snare3	Seaside	Ah Voice	Applause
83			Tambourine	Club Snare4	Riverside	Hoo Voice	Door Creak
(C6) 84			High Agogo	BrushTap3	Bubble	Tape Over1	Door Shut
85			Low Agogo	Brush Tap2	Baby Cat	Tape Over2	Scratch
86			Shaker	Brush Slap1	Birds Sing2	Missile	Wind Chimes
87			High Whistle	Brush Slap2	Growler	Future Bird	Car Start
88		Curtain Call	Low Whistle	Brush Slap3	Audience	Future Ghost	Car Stop
89		Mute Cuica	Brush Swirl1	Telephone1	Car Pass
90		Open Cuica	Brush Swirl2	Telephone2	Car Crush
91		Mute Triangle	Brush Swirl2	Siren
92		Open Triangle	Train
93		Short Guiro	Jet
94		Long Guiro	Helicopter
95		Cabasa Up	Appolo
(C7) 96		Cabasa Down	Gun Shot
97		Claves	Machine Gun
98		High Woodblock	Laser Gun
99		Low Woodblock	Explosion
100		Dog
101		Horse Steps
102		Bird Sing1
103		Rainfall
104		Thunder
105		Wind blows
106		Seaside
107		Riverside
108		Bubble
109	
110	
111	
112	
113	
114	
115	
116	
117	
118	
119	