

No Error Messages

Table 2. Disk Drive Switch and Jumper Settings

Switch or Jumper	Setting	Function
SW2, switch 6	ON	Onboard diskette drive controller enabled
	OFF	Onboard diskette drive controller disabled
SW1, switch 1	ON	Drive A; 360 or 720KB
	OFF	Drive A; 1.2 or 1.44 MB
switch 2	ON	Drive A; 5 1/4" diskette
	OFF	Drive A; 3 1/2" diskette
switch 3	ON	Drive B; 360 or 720KB
	OFF	Drive B; 1.2 or 1.44 MB
switch 4	ON	Drive B; 5 1/4" diskette
	OFF	Drive B; 3 1/2" diskette

If the problem persists, and if your system and disk drives are still under warranty, call Technical Support using the directions at the end of this Troubleshooting Supplement.

Problem Description:

A disk error occurs after system has been on for an extended period

Possible Solutions:

1. Turn the power off.
2. Allow the system to cool down for at least 30 minutes.