


Keylock & Power LED Connector

The keylock connector enables and disables the keyboard and Power-LED on the case.


Pin	Description
1	LED power
2	Not Used
3	Ground
4	Keylock
5	Ground

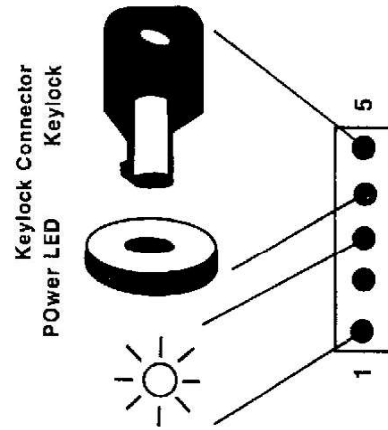

JP:18:Suspend Switch Connector

Attach the Suspend switch to this connector. The suspend switch restarts the system.

Setting	Description
Short	Suspend mode
Open	Not Suspend

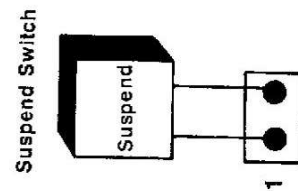

Memory Configuration

Memory Bank Configuration (note: Double side is Bank 0, Bank 2 or Bank 1, Bank 3)

BANK 0		BANK 1	BANK 2	BANK 3	MEMORY TOTAL SIZE
30PIN	72PIN	72PIN	72PIN	72PIN	
256Kx4					1M
	1Mx 1-3				1M
256Kx4		1Mx 1-S			2M
	1Mx 1-S	1Mx 1-S			2M
1Mx4					4M
	1Mx 1-S	1Mx 1-S	1Mx 1-S	1Mx 1-S	4M
	4Mx 1-S				4M
1Mx4		4Mx 1-S			8M
	4Mx 1-S	4Mx 1-S			8M
4Mx4		4Mx 1-S			16M
1Mx4		4Mx 1-S	4Mx 1-S	4Mx 1-S	16M
	4Mx 1-S		4Mx 1-S	4Mx 1-S	16M
	16Mx 1-S	16Mx 1-S			16M
4Mx4		16Mx 1-S			32M
	16Mx 1-S	16Mx 1-S			32M
4Mx4		16Mx 1-S	16Mx 1-S	16Mx 1-S	64M
	16Mx 1-S	16Mx 1-S	16Mx 1-S	16Mx 1-S	64M